



STEP 2. Shut off water inlet until there is no water coming out from the drinking water faucet.

STEP 1. Turn on drinking water faucet.

STEP 3. On the top of the machine, you'll find its inlet marked as **IN** and its outlet marked as **OUT**.

Filter	Time for Replacement
1. Sediment Filter	1.5 year
2. Ionized Microcluster Alkaline Water Generator	
3. Composite Activated Carbon	Please rinse every year
4. Ultrafiltration	

STEP 4. Each stainless steel cylinder is full of water. Disconnect the system and put it inside a sink, or place a bucket and a towel under the stainless steel cylinder to prevent water from spilling.

To disconnect the hose from connector:

1. take off the blue clip;
2. push the piston into the connector;
3. pull out the hose while keeping the piston pushed;

To reconnect the hose to the connector:

1. push the hose into the piston firmly until it cannot be pushed further.
2. place the blue clip back onto the piston.

STEP 5. There is a special screwdriver included with each unit. To open the cartridge, insert the screwdriver into the hole as shown in the picture to the right, and then grab the screwdriver to turn the cylinder clockwise.



STEP 6. After opening the stainless steel cylinder, you'll see the inner filter cartridge.

Do NOT grab the middle of the filter cartridge!

Grab the top of the filter cartridge and pull it off. Then replace it with the new filter cartridge.

After replacing the inner filter, use the special screwdriver to tighten the stainless steel cylinder. Switch on the inlet, open drinking water faucet, and then shut off the faucet. Use a piece of paper napkin to wipe the joints to make sure the napkin does not get wet so that there is no leaking. If there is a leaking, repeat SEPT 1 and STEP 2, and then tighten the cylinder. During the first week, leave the water running for 2 minutes before drinking every time.

